


**RECOMMENDED METHOD OF FITTING A LID TO ANY SIZE CONTAINER
HAVING A LOCK.**




STEP 1:
CONTAINER SHOULD HAVE HINGE
BRACKETS ATTACHED AS SHOWN.




A

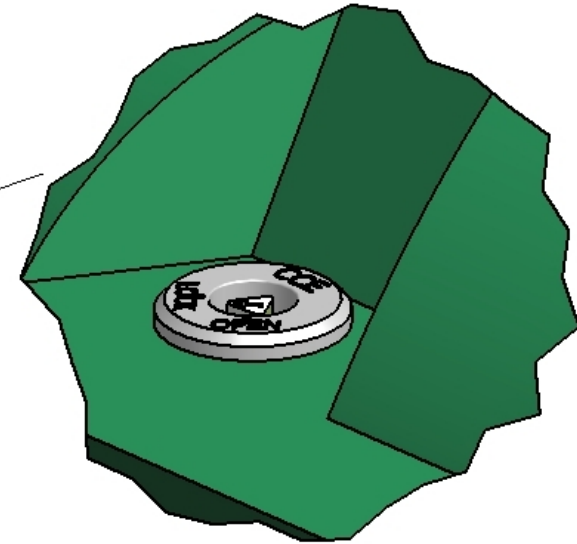

STEP 2:
THE LID SHOULD BE
PLACED ON TOP OF THE
CONTAINER AND THE
LOCKED TURNED INTO
THE LOCKED POSITION
AS SHOWN.

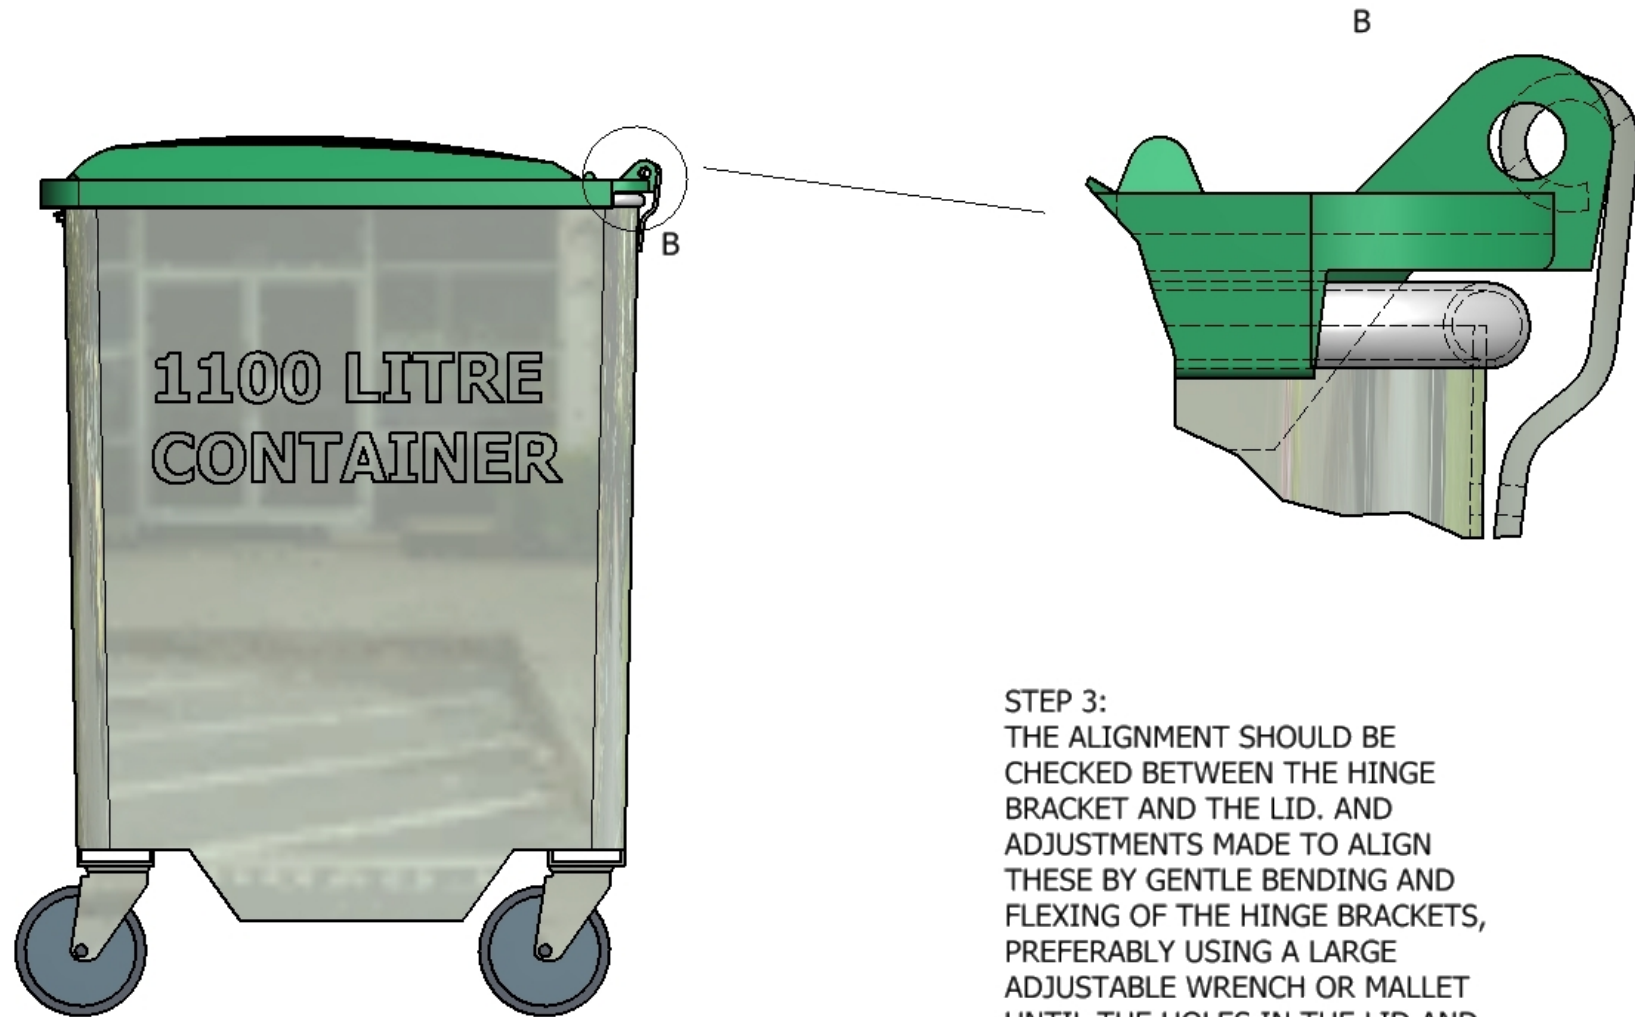

STEP 3:
THE ALIGNMENT SHOULD BE CHECKED BETWEEN THE HINGE BRACKET AND THE LID. AND ADJUSTMENTS MADE TO ALIGN THESE BY GENTLE BENDING AND FLEXING OF THE HINGE BRACKETS, PREFERABLY USING A LARGE ADJUSTABLE WRENCH OR MALLET UNTIL THE HOLES IN THE LID AND HINGE BRACKET ARE IN LINE.

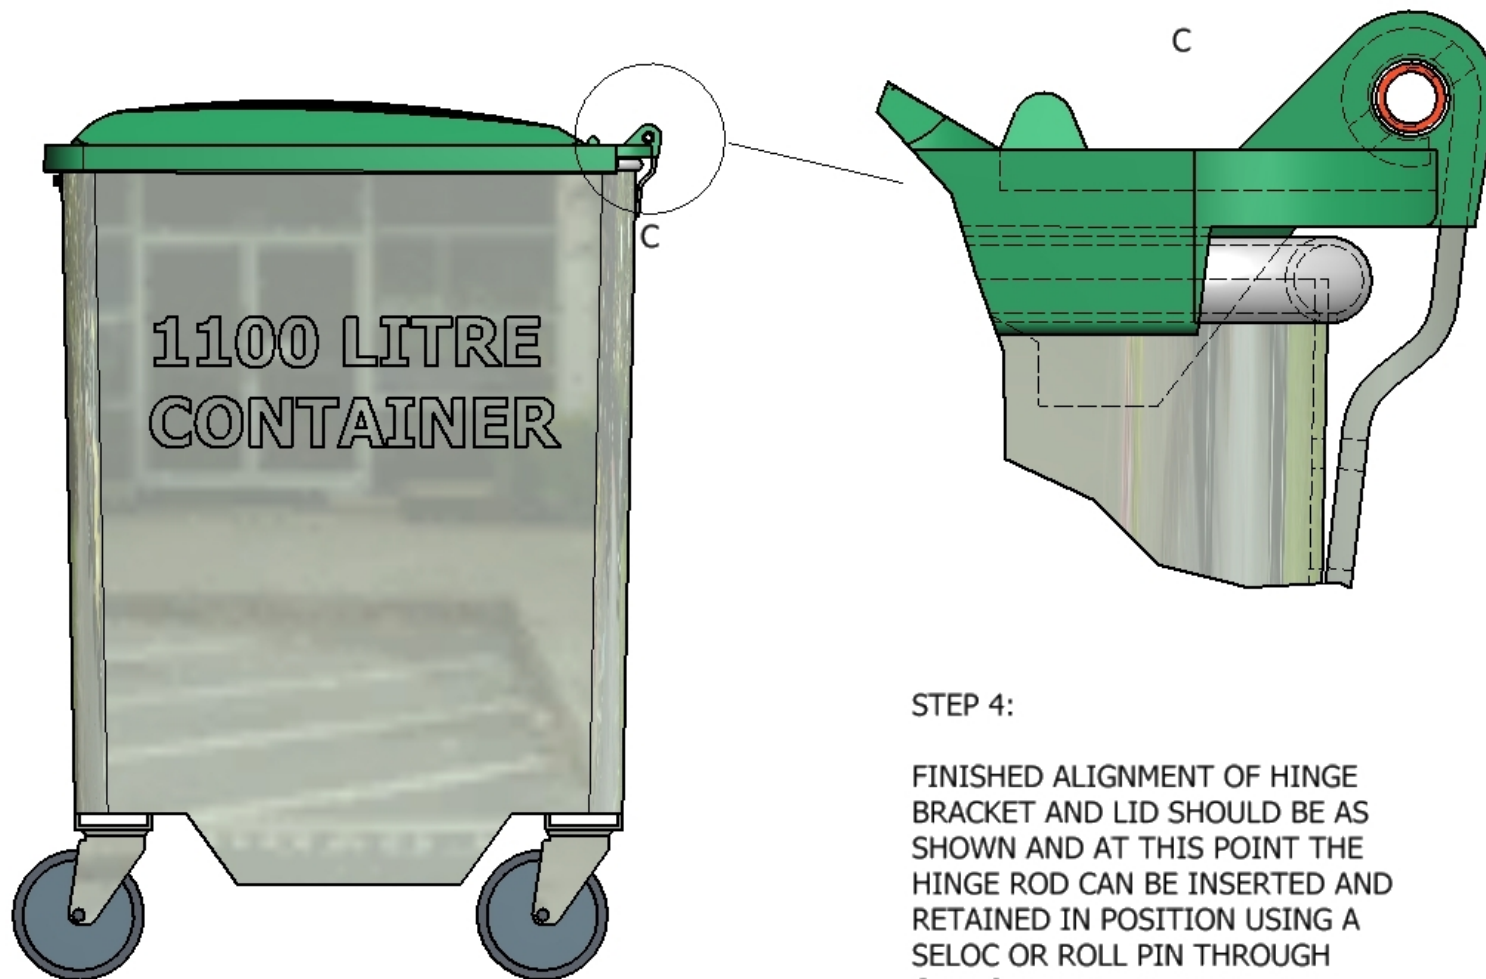

STEP 4:

FINISHED ALIGNMENT OF HINGE BRACKET AND LID SHOULD BE AS SHOWN AND AT THIS POINT THE HINGE ROD CAN BE INSERTED AND RETAINED IN POSITION USING A SELOC OR ROLL PIN THROUGH **ONE** OF THE HINGE BRACKETS.